Universal Remote Control
GDCT-860-LS3

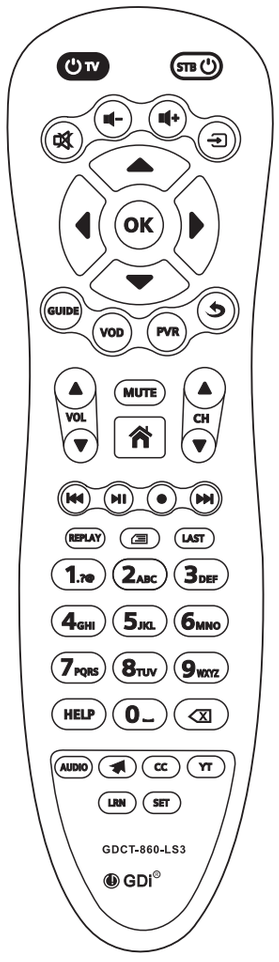

Overview

GDCT-860-LS3 Remote control is the newly designed 2in1 remote controlling for 2 devices of TV & CBL. You can program your Remote Control to operate most of models of most brands of infrared remote-controlled TV in the world, including the most updated codes for Flat Screen TV. Further more, this remote builds with TV learning function & allows you to learn the codes from a TV remote that you want to work for your current TV.

Battery Installation and Information

The GDCT-860-LS3 remote control requires two AA Batteries. To install the batteries

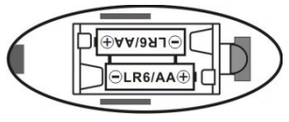

1. Remove the battery cover.
2. Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery compartment.
3. Press and push the battery cover back into the place.

Caution:
If you do not plan to use the remote for an extended period, remove the batteries. They can leak chemicals that can destroy electronic parts.

Programming Device

» Code Input Setting

1. Turn on the TV Power.
2. Locate the 4 digit code corresponding to your device in the code list.
3. Press “SET” button till the LED light up, and then release all buttons.
4. Input the 4 digital numbers you choose from the code list, the LED will flash one time while you input 1 digit number. The LED will light off directly to exit the setting mode if correct digital number you input.
5. If wrong code inputted, the LED will flash 3 times to exit the setting mode. Please repeat step 4 if wrong code inputted.
6. After inputting the codes, please test the remote working status on the device. If device is not controllable, please choose other 4 digital codes from the code list & repeat step 1-4 to make sure your remote workable.

Notes: If not keys pressed in 30 seconds, the LED will light off to exit the setting mode.

» Auto Searching Mode

If you could not find the correct 4 digital number after many times of code inputting, please use auto searching to locate the correct one:

1. Turn on the device you will control.
2. Press “SET” button till the LED light up, and then release all buttons.
3. Aim Remote to the device (TV), press “TV POWER” button till the TV turn off, and then release all buttons.
4. Please test other function keys under TV working or not. If working no properly, please repeat step 1 – 3 to locate the correct codes.

Note: If not keys pressed in 30 seconds, the LED will light off to exit the setting mode.

Your Favorite

For future reference, please write down working codes you are setting in the TV:

TV Codes

☐☐☐☐ Device Type: _____

Code Lock

1. Press & hold “SET” button for 3 seconds till the LED light up, release all buttons.
2. Input the 4 digital numbers “9-9-9-1” in turn, the LED will flash one time after every input of number.
3. After inputting the 4 digital numbers, if the LED lights off directly, it indicates the code lock to be activated. If the LED lights off after flashing 2 times, it indicates the cancellation of code lock function..

Programming Learning

The remote brings with TV learning function, and buttons to be learned are available under POWER/MUTE/V+/V-/INPUT).

» How to Learn

1) Press “LRN” button till the LED light up, the remote enter into learning mode.
2) Press a button on the remote that will learn the code, the LED flashes one time & light up.
3) Aim the target remote at the GDI-1104 remote (less than 2 feet).
4) Press one effective button on the target remote, the LED flashes quickly 3 times & light up, it indicate the code is successfully learned.
5) Repeat Step 2-4 to learn more button codes.
6) Press “LRN” button again to exit the learning mode, or if no buttons pressed in 20 seconds, the LED will light off to exit the setting mode.

» Clear the learned button codes

1) Press “LRN” button till the LED light up, the remote enter into learning mode.
2) Input the 4 digital number “9-9-6-6” in turn, the LED flashes 2 times to indicate all learned codes to be deleted.

Recall to Factory Default Setting

1) Press “SET“ button till the LED light up, release all the buttons.
2) Input the 4 digital number “9-9-9-9” in turn, the LED flashes 2 times & light off, the remote returns to the factory default setting status.

Code List

A_nity	1205 1168 1169
Accurian	1009
Acer	1020
Action	1020
Admiral	1018 1026 1205
Advent	1040 1009 1126
Advertura	1320
Aiko	1020
Aiwa	1019 1524 1033
Akai	1008 1028 1033 1001 1020 1073 1111 1144 1009 1148 1141 1128
Alaron	1116
Albatron	1032 1052
Aleron	1033
Ambassador	1168
America Action	1026
Ampro	1001
Anam	1026
Aoc	1008 1078 1109 1131 1230 1192 1234 1106 1028 1311
Aomni	1151
Apex Digital	1001 1009 1072 1039 1071 1221
Ascent	1276
Astar	1028 1151
Asus	1116
Audiovox	1001 1008 1009 1033 1020 1026 1028 1065 1124 1128 1160 1169 1182 1186 1187 1222 1229
Auria	1008 1192
Aventura	1020
Axion	1182
Bell&Howell	1020 1205
BenQ	1020 1098
Blue Light	1008 1277
Bradford	1026
Brillian	1073
Broksonic	1028 1026 1173 1141 1249
Byd:sign	1097
C & M	1032
Candle	1008 1320
Carnivale	1008
Carver	1009
Casio	1072
CCE	1028
Celera	1001
Celebrity	1128
Champion	1019
Changhong	1001
ChiMei	1041
Citizen	1008 1005 1018 1020 1142 1028 1141 1320
Clairtone	1311
Clarion	1026
Claris	1153
Coby	1020 1137 1208 1209 1028 1020 1141 1213 1214 1215 1216 1217 1151 1218 1219 1009
Commercial Solutions	1008
Contec	1026 1183 1311
Craig	1026 1252
Crosley	1128 1009
Crown	1005 1026
Curtis	1070 1100 1220 1221 1240 1205 1258 1168
Curtis Mathes	1005 1008 1009 1018 1019 1020 1028 10261033 1068 1128 1205
Daewoo	1005 1020 1028 1033
Dell	1009 1028 1091
Denon	1020
Diamond Vision	1524
Digistar	1125
Digital Lifestyles	1120
Disney	1020 1026 1033
Dumont	1008
Durabrand	1020 1019 1026 1075 1126
Dwin	1314
Dynex	1026 1116
Electroband	1128 1311
Electrograph	1041 1151
Electrohome	1026 1126 1141 1028
Electron	1240
Element	1020 1168 1028 1160 1116
Emerson	1005 1020 1019 1026 1028 1033 1168 1116 1173 1170 1183 1524 1311 1168
Emprex	1116 1120
Encross	1066
Envision	1008 1009 1131 1192
Epson	1080 1028
ESA	1020 1033 1183
Fisher	1020 1019
Fluid	1160
Fujitsu	1030 1047 1055 1301 1116
Funai	1020 1026 1116 1128 1170 1183
Futuretech	1026
Gateway	1041 1156
Ge	1008 1009 1019 1028 1001 1068 1026 1174 1033 1319 1322
GFM	1020 1168 1183
Gibralter	1008 1008
Go video	1192 1316
Goldstar	1008 1019 1178 1192
GPX	1028
Gradiente	1110 1008
Grundig	1030
Grunpty	1026 1116
Haier	1043 1075 1126 1028 1033 1128 1225 1247
Hall Mark	1019
Hanns.G	1162
Hannspree	1106 1106 1019 1162
Harley Davidson	1170 1116
Harman Kardon	1009
Harvad	1026
Havermy	101
Helios	1020 1116
Hello Kitty	1028
Hewlett Packard	1077 1078 1079 1009 1039 1151 1140 1018 1028
Hitachi	1005 1030 1001 1020 1067 1105 1170 1239 1170 1191 1205
HP	1077 1079 1009
Hyundai	1033 1020 1096 1251
I-Inc	1155
iLo	1091 1009 1020 1026 1128 1146 1189
In_nity	1009
Initial	1189 1128
Insignia	1020 1026 1071 1100 1111 1028 1030 1124 1139 1140 1116 1183 1128 1238
Inteq	1008
iRIS	1203
iSymphony	1008 1033
IX	1067
Janeil	1320
Jbl	1009
Jcb	1128
JCM	1203 1207
Jensen	1040 1009 1018 1230 1100 1230 1247
JVC	1008 1026 1038 1141 1175
KDS	1020
Kec	1026
Kenwood	1008
KLH	1001
Kloss	1320
Kinka	1305
Kolin	1028 1026
Konka	1036 1111
Kost	1075 1009
Kreisen	1066
Ktv	1008 1005 1026 1311
LG	1008 10091019 1032 1028 1114 1181 1157 1278 1183
LiteOn	1077
Lloyd’s	1170
Lodgenet	1205
Logik	1205
LodgingStar	1008
Luce	1074
Lxi	1008 1009 1020 1018 1019
MAG	1020
Magnasonic	1170 1028
Magnavox	1008 1009 1020 1028 1033 1001 1121 1041 1153 1170 1180 1183 1189 1131 1192 1153 1116
Magnin	1026
Majestic	1205
Marantz	1008 1009 1034 1056 1112 1205
Matsushita	1026
Maxent	1041 1074 1205
MB Quart	1169
Megapower	1032
Megatron	1020 1019 1268
Mei	1311
Memorex	1018 1020 1019 1026 1067 1141 1116 1033 1173 1176 1178 1249 1205
Mga	1008 1018 1019 1026 1268
Midland	1005 1008 1009 1033
Mintek	1128 1189
Minutz	1319
Mitsubishi	1018 1019 1051 1106 1020 1020 1268 1116
Monivision	1032 1052
Montgomery Ward	1205
Motorola	1018
Mtc	1008 1018 1311
Multi Tech	1026
Nad	1018 1019 1061 1020
Naxa	1128 1157 1221 1033
NEC	1008 1034 1066 1112 1020 1128 1067 1318 1321
NetTV	1041 1041 1173
Nexus Electronics	1028
Nikko	1008 1020 1019
Niko	1130
Norcent	1039 1050 1078 1109 1131 1230 1130 1019 1028 1020
Norwood Micro	1009 1001
NTC	1020
NuVision	1008 1202
Ólevia	1081 1028 1134 1173
Onwa	1026
Optimus	1020 1019 1026 1170 1176
Optique	1203
Optoma	1106
Optonica	1018 1317 1323
Orion	1026 10268 1173 1173 1249 1116
Panasonic	1009 1020 1026 1176 1185
PARK	1128
Penney	1005 1008 1009 1018 1019 1068 1026 11781322 1319
Philco	1008 1009 1020 1028 1183
Philips	1009 10201005 1109 1183 1153 1189 1028 1192 1281 1168
Pilot	1008 1005
Pioneer	1019 1020 1061 1030 1112 1281
Planar	1095 1131
Polaroid	1001 1020 1008 1009 1026 1151 1019 1075 1100 1093 1111 1125 1159 1160 1130 1198 1291
Portland	1005 1020 1028
Prima	1040 1009 1018 1028 1116
Princeton	1032 1037
Prism	1009
Proscan	1008 1026 10271028 1068 1174 1200 1033 1205 1169 1292
Proton	1019 1026
Proview	1020
Pulsar	1008
Pyle	1070 1205 1235
Quasar	1026 1323
Radio Shack	1009 1020 1026 1176 1005 1008 1020 1019 1026 1170
Rca	1008 1009 1018 1028 1030 1026 1033 1040 1068 1111 1020 1169 1174 1128 1157 1240 1160 1205 1169
Realistic	1008 1005 1020 1019 1026
RevolutionHD	1151
Rhapsody	1311
Runco	1008 1112 1321 1205
Sampo	1008 1005 1041 1293
Samsung	1008 1005 1018 1019 1028 1026 1033 1042 1049 1127 1128
Samsux	1005
Sansui	1020 1114 1026 1141 1170 1173 1249
Sanyo	1009 1020 1026 1045 1019 1286 1130 1324
Sceptre	1068 1071 1107 1131 1128
Scotch	1019
Scott	1019 1026 1149 1028 1116
Sears	1008 1009 1020 1018 1020 1019 1073 1170 1178 1116
Seiki	1019 1160 1116 1205 1116
Seleco	1106
Sens	1169
Sharp	1005 1018 1056 1131 1151 1183 1323 1028
Sheng Chia	1018
Sherwood	1113 1243
Sigmac	1252 1001
Signature	1009 1205 1205
Signet	1075
Skyworth	1008
S/M	1283 1284
Sole	1074 1009 1151
Sony	1028 1177 1147 1157 1128 1170 1269 1274 1275 1168
Soundesign	1019 1026 1116
Sova	1187
Soyo	1120 1155 1026
Spectricon	1020
Squareview	1020
Sss	1026
Starlite	1026
Studio Experience	1052
SunBriteTV	1162 1134 1128
Supremacy	1320
Superscan	1018 1183
Supersonic	1028 1128 1221 1247 1192 1026 1008
Supreme	1128
SVA	1039 1028 1043 1020 1062 1063 1183 1116
Sylvania	1008 1009 1020 1028 1098 1151 1168 1170 1180 1183
Symphonic	1020 1026 1170 1183
Syntax	1081 1028 1134
Tandy	1018
Tatun	1294 1008 1009
Tatung	1079 1009 1095 1108 1156 1227
TCL	1205
Technics	1009 1026
Technol Ace	1116
Techview	1191
Techwood	1009
Teco	1076
Teknika	1005 1009 1018 1020 1026 1268 1116 1205
Telefunken	1033 1033
Telerent	1205
Thomas America	1170
Tmk	1019 1168
Tnci	1008
Toshiba	1018 1020 1026 1028 1033 1033 1110 1112 1141 1128 1329
Totevision	1005
Trical	1183
TruTech	1020 1150 1194
TVS	1026
Univerasl	1322
US Logic	1009
VEA	1283
Vector Research	1008
Venturer	1169
VEOS	1073
Victor	1008
Vidikron	1009 1112
Vidtech	1019
Viewsonic	1001 1008 1009 1018 1028 1026 1040 1070 1102 1109 1124 1136 1152 1192 1116 1192 1151 1170 1273 1296 1297
Viking	1320
Viore	1073 1146 1205 1128 1220 1008 1033 1020
VisionQuest	1250
Vistron	1199
Vivitek	1110
Vizio	1018 1028 1070 1156 1157 1236 1287
Vuon	1251
Wards	1008 1009 1018 1020 1019 1026 1028 1061 1068 1319
	1322 1323 1116 1205
Waycon	1018
Westing House	1008 1028 1070 1071 1072 10031093 1116 1128 1204 1221 1153 1205
White Westinghouse	1026 1028 1033 1183
Wyse	1109
Yamaha	1001 1008
Zenith	1108 1020 1028 1019 1026 1109 11701173 1205
Others	1008 1128